

SLR + Studio Flash connection: *How-To*

Canon –

Menu: Flash control >





Flash firing > Enabled

Built-in flash func. setting > Shutter sync > 1st curtain

Flash exposure compensation: 0 (zero)

Nikon –

No menu settings necessary

- **Manual mode:** $\frac{1}{200}$ second @ f 8.0 (as a starting place)
- **ISO:** 200
- **White Balance (WB):** Flash  or Daylight 
(Cloudy  or Shade  will give a warmer look)

Connect PC adapter/cord to camera hot-shoe (*for plastic-footed PC adapter, make sure the PC port connector is facing you [by the camera's view finder eyepiece]*).

To get the proper exposure, adjust the **aperture** (f stop) of your camera.